


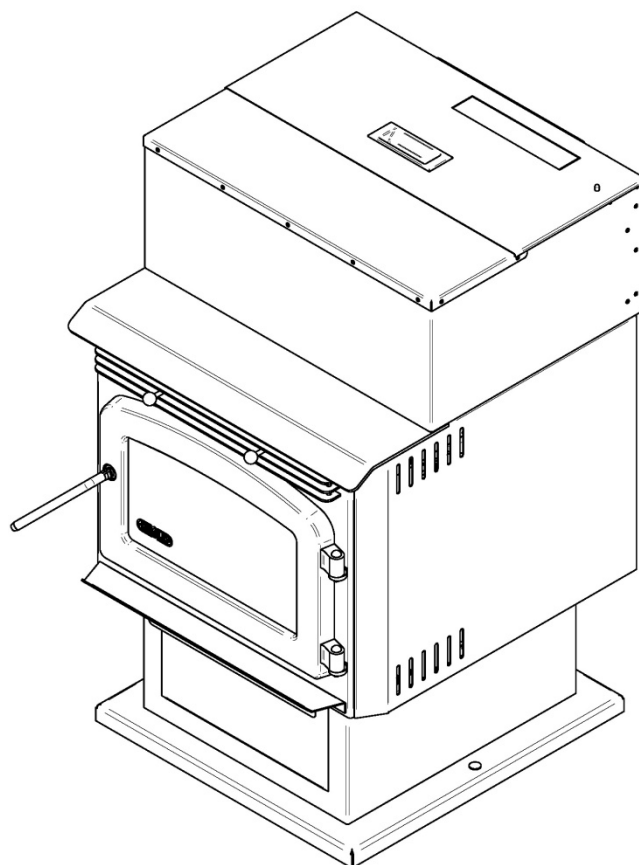


## HOPPER EXTENSION INSTALLATION INSTRUCTIONS

### ECO-35 PELLET STOVE



# Hopper extension

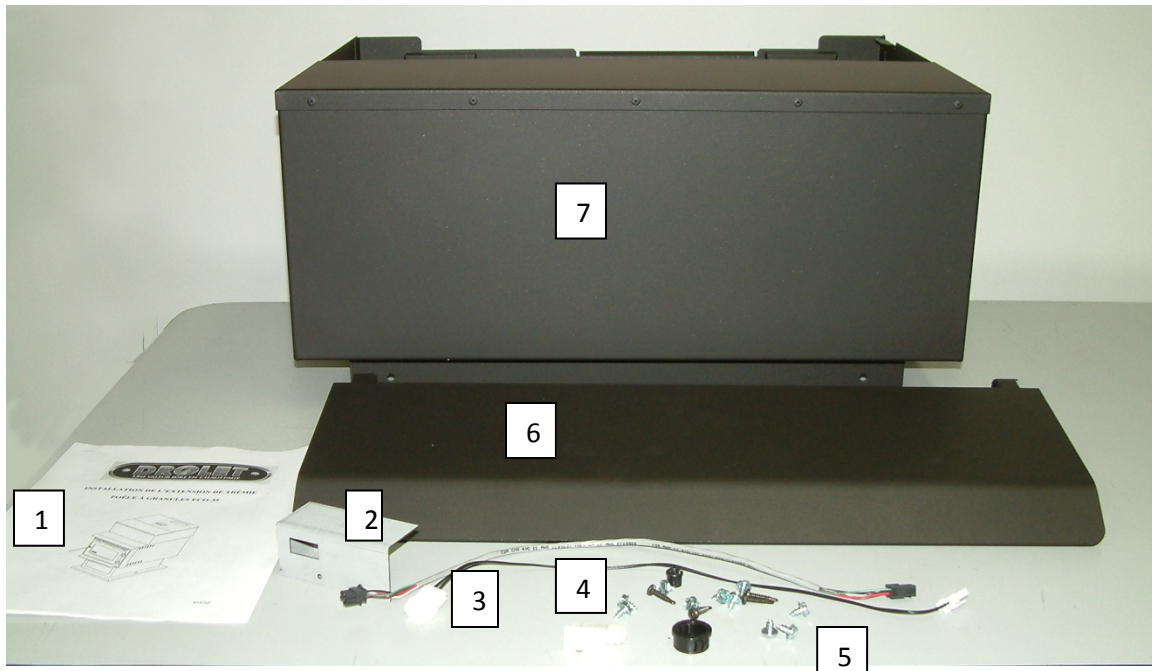

## Included in package


1. Instruction booklet
2. Hopper switch housing
3. Extension cables
4. Hopper switch
5. Hardware
6. Front stove top
7. Hopper extension

# Hopper extension



First, remove the 4 screws securing the hopper hinges to the stove and then the 4 screws securing the hopper lid bumper support. Also, remove the 2 corner screws.

## Hopper extension

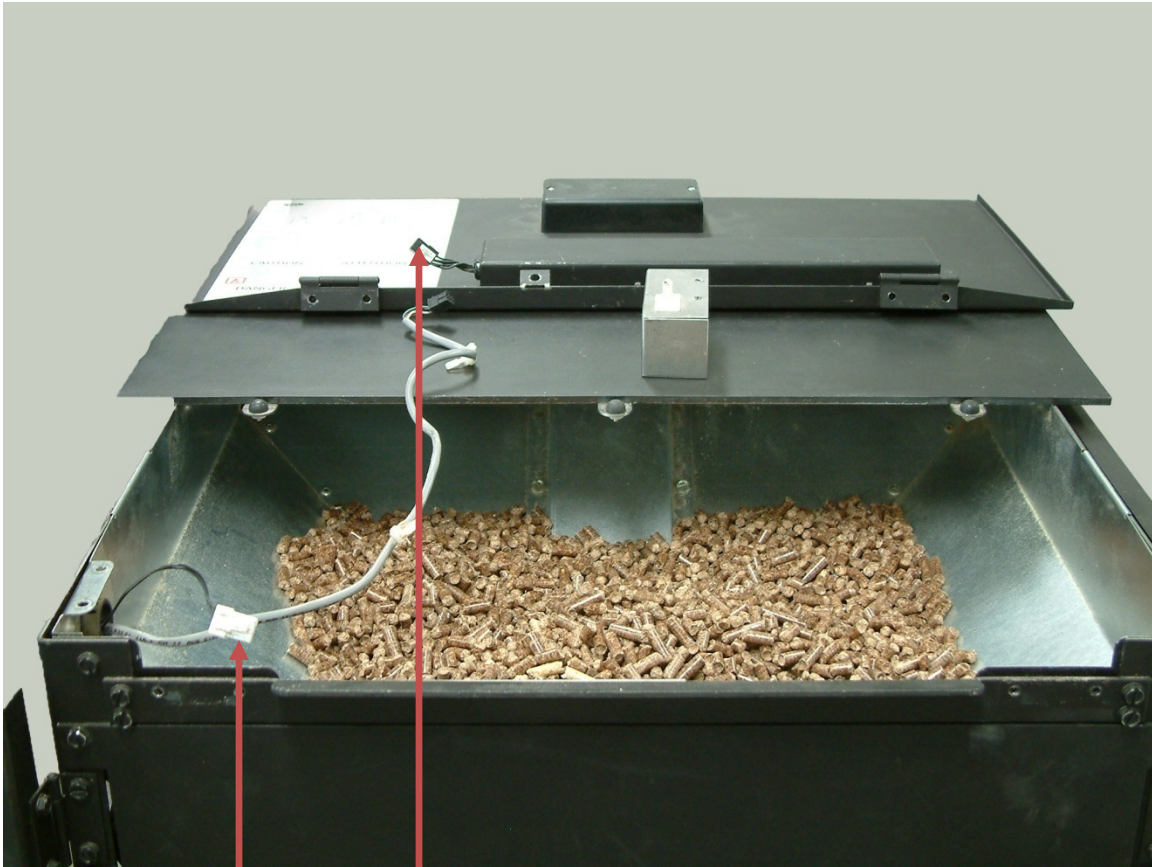

Disconnect the hopper switch and the touch pad wires and pull them out of the plastic sleeve.

# Hopper extension



Open the decorative panel on both sides and remove the two screws securing the top to the stove.

In order to open the decorative sides, first remove the screw located at the top front of the panel; applying a light downward pressure on the panel will release the bottom tab from its slot and the panel will swing open like a door.

# Hopper extension



Using vise grips squeeze the cable protector and the hopper switch bracket as tight as possible against the sides of the hopper.




# Hopper extension



Secure the new top using the front screw only. The other hole will be used later to secure the hopper extension.


# Hopper extension

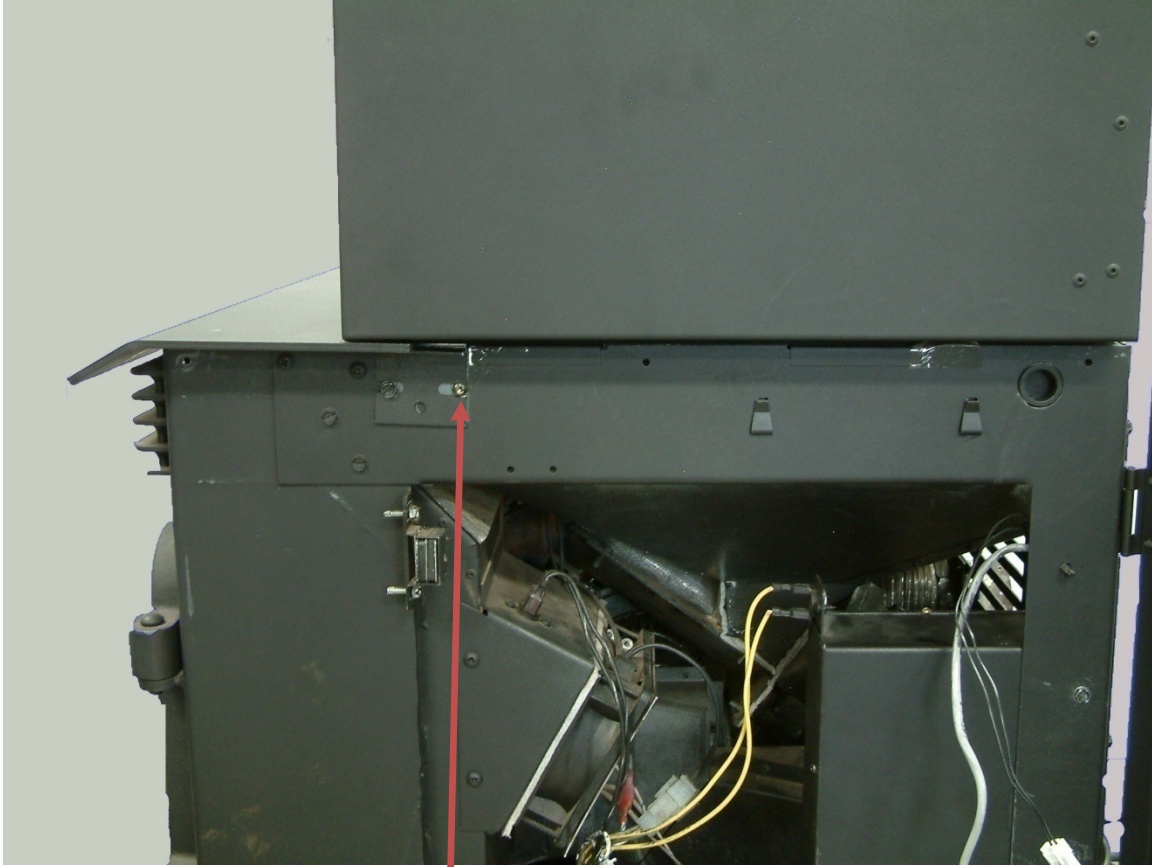

Insert the hopper extension inside the hopper and secure it on both sides with self-drilling screws using the rear holes of the top's fixation brackets.




# Hopper extension

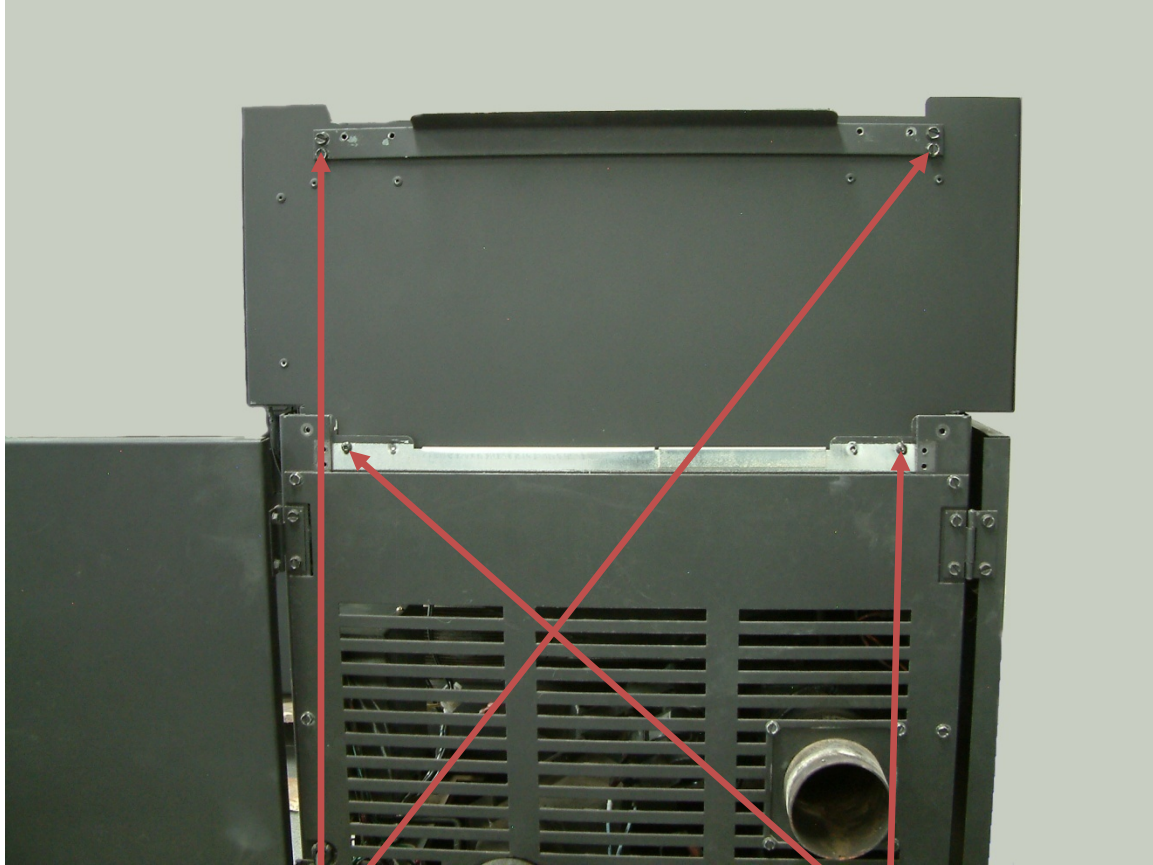

Secure the hopper lid bumper support to the extension.

Secure the hopper extension with self-drilling screws through the outer screw holes left by the removal of the hinges.

## Hopper extension

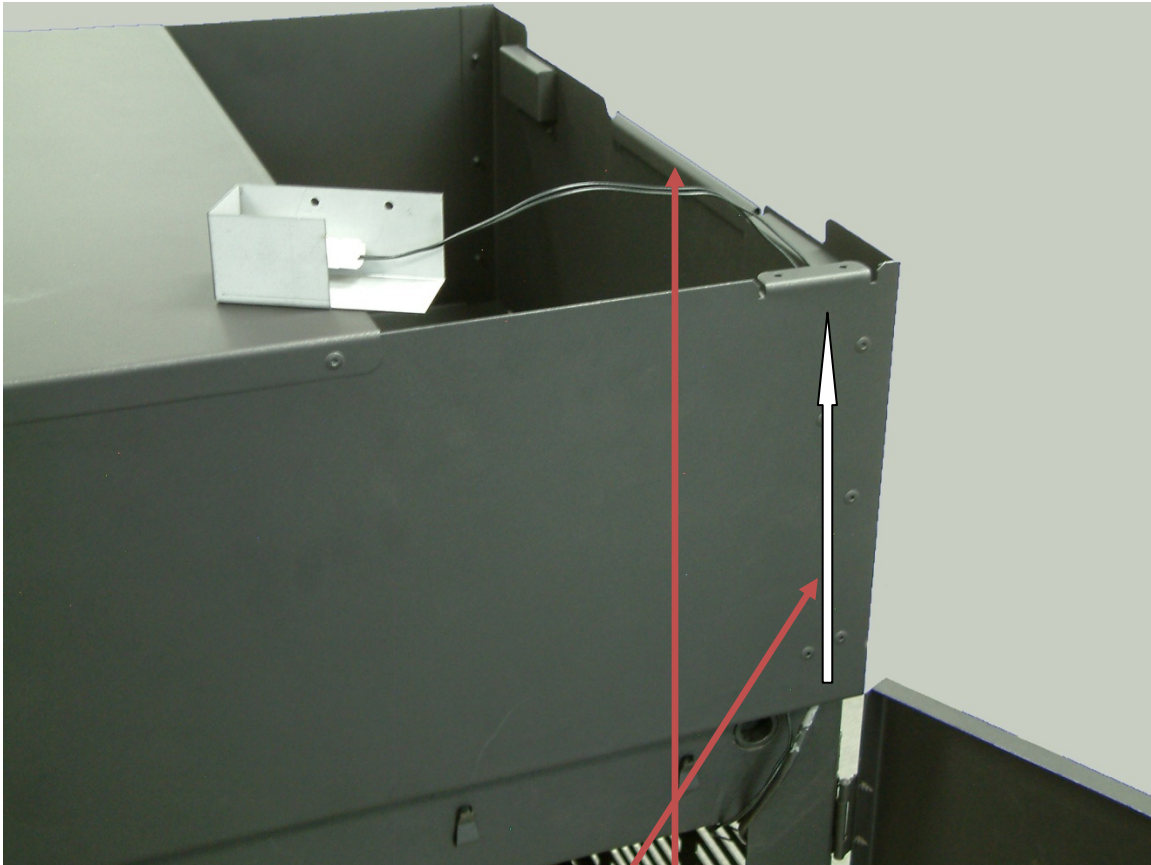

Run the hopper switch and touch pad cables through the vertical channel inside the hopper extension.


Run the touch pad cable under the wiring protector on the back of the extension and bend the tabs inwards.

# Hopper extension



Put the hopper lid in place and secure the hinges to the extension with the screws that held them to the stove previously.

# Hopper extension

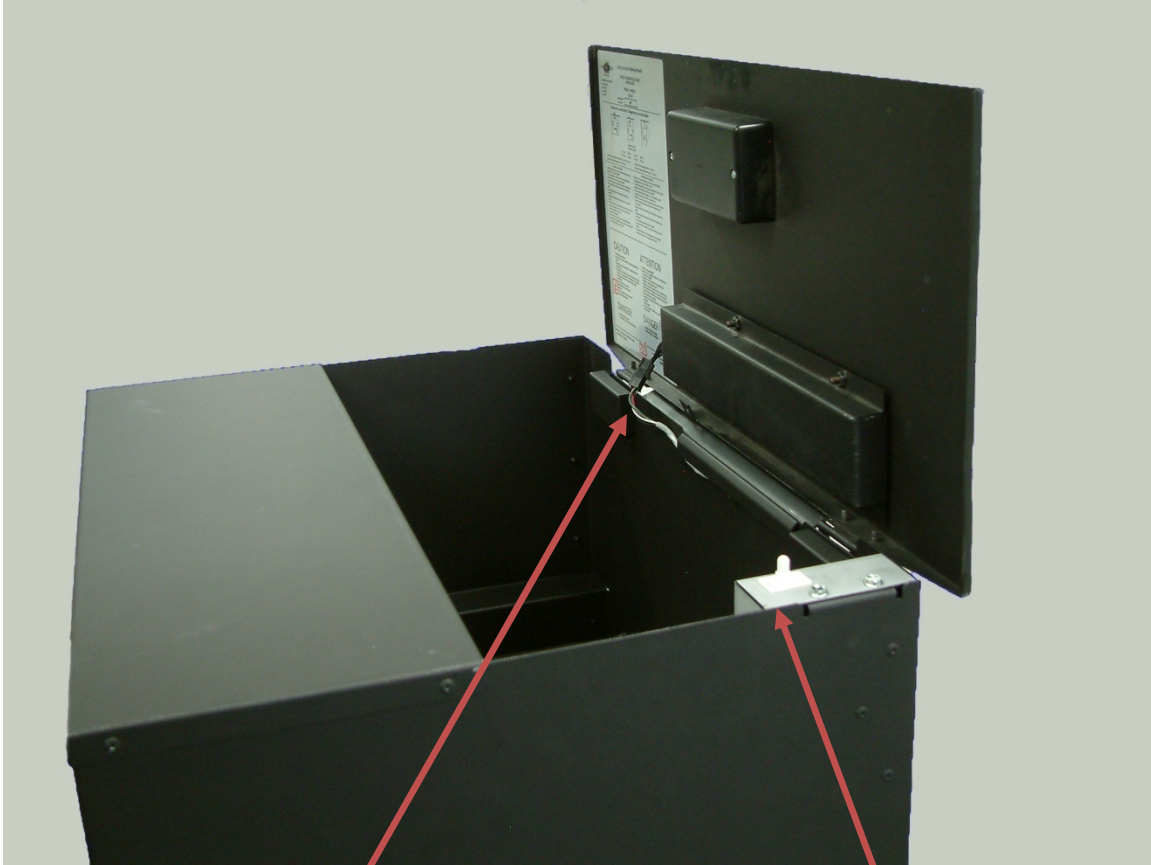

Plug the touch pad and the hopper switch cables back in.

Secure the hopper switch housing to the hopper extension with the screws that used to hold it to the stove.